

Duplimate Mk VI hurtigstartguide

1. STARTE DUPLIMAT

Tilslut strømadapteren til stikkontakten og maskinens strømindgang. Maskinen åbner og lukker portene, når den er klar.

2. INSTALLER APPEN

Du Skal installere Duplimapp for at styre maskinen. Der findes forskellige versioner:

Download Duplimapp (dubblingsapp)

Der findes forskellige apps til forskellige platforme. Klikbare links findes på duplimapp.com.

[Android](#)

[Apple](#)

[Kindle](#)

[Windows](#)



3. INDSTIL NETVÆRK (WLAN)

Tilslut din enhed til Duplimate WiFi-netværket. Netværkets navn OG adgangskoden er Duplimate+enhedens nummer (4 STORE cifre på bagsiden). f.eks. "Duplimate2345"

"Glem" (deaktiver) "Opret forbindelse automatisk" til andre netværk.

4. STARTE DUPLIMAPP

 
Klik Duplimapp, og vent på, at startskærmen vises.



5. VÆLG DESIGN

Klik på System-ikonet (3 lodrette prikker), og vælg Design. Klik på ?-knappen hvis du har brug for hjælp. Illustrationer af designene findes her:

http://www.jannersten.com/duplimapp/Help/html/designs_en.html

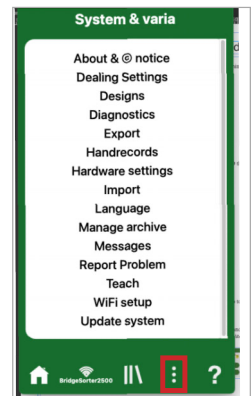

6. HJÆLP!

Klik på ?-knappen for at få den aktuelle skærm og dens funktioner forklaret.



7. HJEM

Klik på knappen Hjem for at starte en ny turnering.



8. OPRET NY TURNERING

 
Klik NY turnering. Dette fører til Indstillinger

9. INDSTILLINGER

Vi foreslår, at du først prøver med standardindstillingerne og kun ændrer parameteren "Til", hvis nødvendigt.

10. DUBBLERE

Indsæt den første mappe, der skal dubblere, og følg instruktionerne.

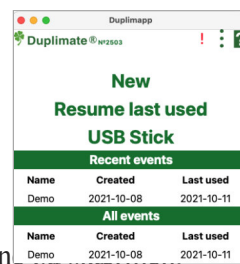


11. UDSKRIV GIVNE HÆNDER

Klik på System-ikonet (3 lodrette prikker), og vælg Givne hænder.

12. EKSPORT

 Vælg Eksporter via Systemmenuen (ikonet med de 3 prikker), hvis du har brug for at eksportere givfilerne (inkl. Givne hænder) til en anden enhed eller til et USB-flashdrev. Bemærk, for at bruge USB alternativet skal flashdrevet sættes i stikket på bagsiden af maskinen.

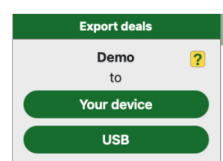

The boards

Please give a copy of this page to those who are to handle the boards



LABELING

- i. Make sure that you put North in the right direction. (North shall be to the left hand side when you have the hinges towards you.)
- ii. You are advised to put the small number on the edge of each and all boards, as shown on the back of the sheets carrying the stickers. It is worth while to bother about this, because it will make it easier to check that the boards in a pile are complete and stacked in numerical order.



Board number barcode

You must be careful to put the (optional) sticker showing the board number in barcode (digital) form at NORTHS end. The indent on the stickers must match the indent on the board. (Verify that you got it right by testing the first set before continueing.)

HANDLING THE BOARDS

The recommended procedure is as follows:

- i. Put the sets of boards to be duplicated on the right hand side of the machine.
- ii. Have at least three (preferably more) decks in the hopper when you start.
- iii. Open the first board to be duplicated and put the cards in the hopper.
- iv. Insert the just emptied board.
- v. Open the next board and put the cards in the hopper.
- vi. When the machine stops, remove the just duplicated board, close it, and put it upside down to the left hand side of the machine.
- vii. Insert the emptied board (according to v.)
- viii. Open the next board and put the cards in the hopper, etc.

 
 
DAILY MAINTENANCE

We do not expect you to do the "daily maintenance" described below daily, but when needed. The machine will indicate when you need to act.


1. CARD SENSORS

The machine will in some cases tell which sensor is blocked. Anyhow: clean all when you are at it. [See video](#) for instruction on how to clean.

The counters are numbered in the same way as the cards move from the hopper to the slots. i.e. in the cards' direction.

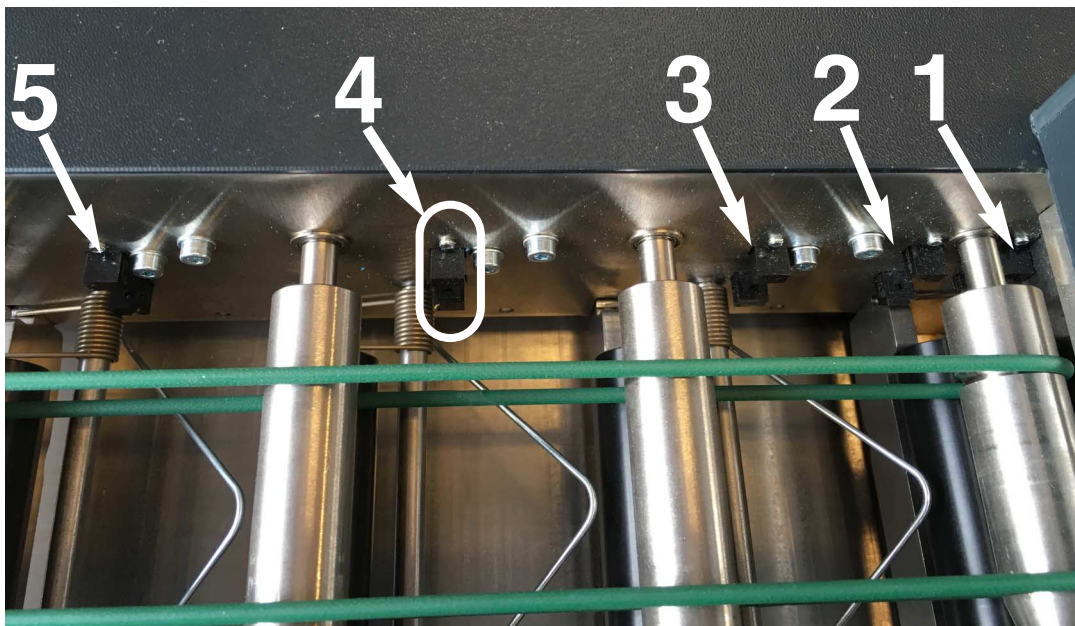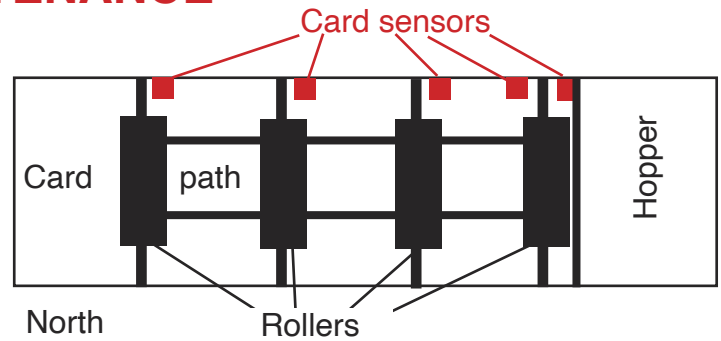

 The 1st sensor is close to the hopper and easily missed if you do not know that it sits there.

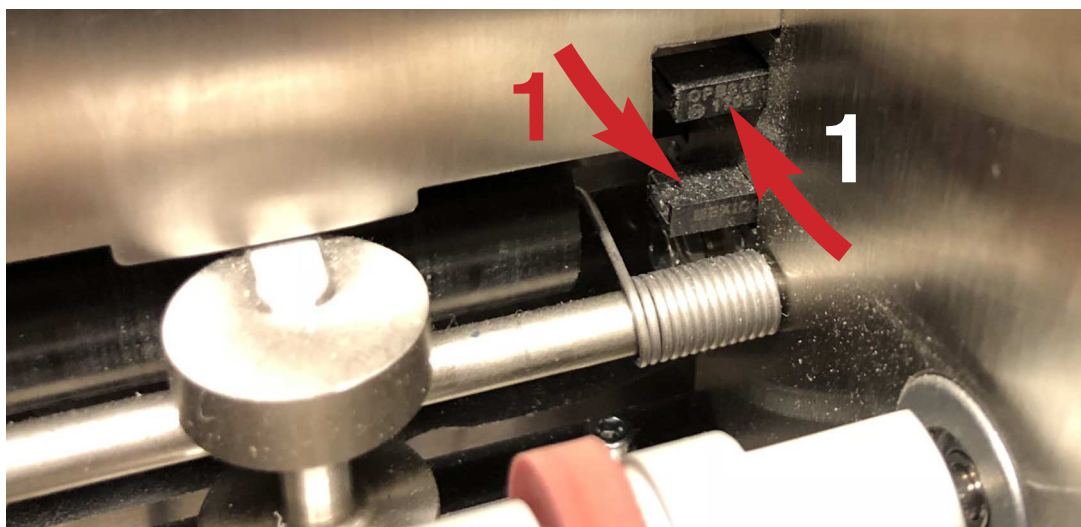

Make sure that you clean all five sensors with real compressed air (not canned) while you are at it. You can also use a small soft brush (e.g. a child's tooth brush). **Note** that it is important to clean the upper part of the sensors. c.f. the video <https://youtu.be/Aha8Q1FrKj0>

OCCASIONAL MAINTENANCE

2. FEED ROLLER

You will need to clean the roller with Isopropyl Alcohol, if it for some reason would pick up grease (or oil).

3. CAMERA

Dust should be blown off the camera (2) if it is totally covered (=when the machine has problems to recognize the cards).

Please do not use any liquids or tools to clean the camera!

NOTE that canned compressed air can damage the lens. It is better to clean (gently) with a cotton bud if blowing with your mouth does not suffice.

