

Guida veloce Duplimate Mk VI

1. COLLEGARE LA MACCHINA ALLA ALIMENTAZIONE

Collegare l'adattatore alla presa di corrente e alla macchina. La macchina scuote gli sportelli quando è pronta.

2. INSTALLA L'APP

È necessario installare l'app "Duplimapp" per controllare la macchina. Ci sono diverse versioni:

Scarica Duplimapp

Seleziona l'applicazione per il tuo cellulare/tablet/computer. Vedi i link cliccabili su duplimapp.com

Android

Apple

Amazon Kindle

Windows



3. IMPOSTAZIONI DI RETE (WLAN)

Collega il tuo dispositivo alla rete Duplimate. Il nome della rete E la password sono Duplimate + il numero della macchina (4 cifre GRANDI sul retro). ad esempio "Duplimate2345"

"Dimentica" (disabilita "Connetti automaticamente") altre reti.

4. AVVIARE DUPLIMAPP

Avvia l'app e attendi che venga visualizzata la schermata iniziale



5. SCEGLI I MODELLI

Fare clic sull'icona Sistema (3 punti verticali) per selezionare Modello/i. Fai clic sul pulsante "?", se hai bisogno di aiuto. Le illustrazioni dei disegni possono essere trovate qui:

http://www.jannersten.com/duplimapp/Help/html/designs_en.html

6. AIUTO!



Fare clic sul pulsante "?" per una spiegazione della schermata corrente e delle sue funzioni.

7. BENVENUTO



Fai clic sull'icona Home per iniziare un nuovo torneo.

6. CREA UN TORNEO

Fai clic su NUOVO torneo per accedere alla schermata Impostazioni:

7. PARAMETRI

Ti consigliamo di provare con le impostazioni predefinite.

Cioè, modificare il parametro "a", solo se necessario.

8. DUPLICATO

Inserisci il primo caso da realizzare e segui le istruzioni a schermo.

9. SCHEDA TECNICA

Fare clic sull'icona Sistema (3 punti verticali) per selezionare Scheda tecnica.

 
 
10. ESPORTAZIONE

Selezionare Esporta tramite sistema (3 punti verticali), se è necessario esportare file di dati (compresi i file) su un altro dispositivo o su un'unità flash USB. Si noti che l'unità USB deve essere inserita nello slot sul retro della macchina per l'alternativa "USB".



Recent events		
Name	Created	Last used
Demo	2021-10-08	2021-10-11

All events		
Name	Created	Last used
Demo	2021-10-08	2021-10-11

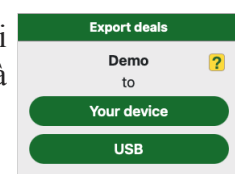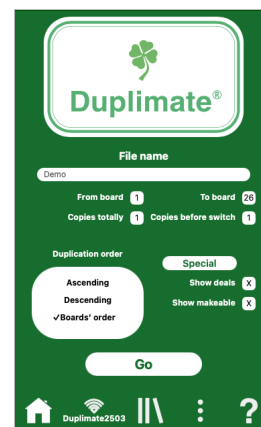

The boards

Please give a copy of this page to those who are to handle the boards



LABELING

i. Make sure that you put North in the right direction. (North shall be to the left hand side when you have the hinges towards you.)

ii. You are advised to put the small number on the edge of each and all boards, as shown on the back of the sheets carrying the stickers. It is worth while to bother about this, because it will make it easier to check that the boards in a pile are complete and stacked in numerical order.



Board number barcode

You must be careful to put the (optional) sticker showing the board number in barcode (digital) form at NORTH'S end. The indent on the stickers must match the indent on the board. (Verify that you got it right by testing the first set before continuing.)

HANDLING THE BOARDS

The recommended procedure is as follows:

- i. Put the sets of boards to be duplicated on the right hand side of the machine.
- ii. Have at least three (preferably more) decks in the hopper when you start.
- iii. Open the first board to be duplicated and put the cards in the hopper.
- iv. Insert the just emptied board.
- v. Open the next board and put the cards in the hopper.
- vi. When the machine stops, remove the just duplicated board, close it, and put it upside down to the left hand side of the machine.
- vii. Insert the emptied board (according to v.)
- viii. Open the next board and put the cards in the hopper, etc.

 
 
DAILY MAINTENANCE

We do not expect you to do the "daily maintenance" described below daily, but when needed. The machine will indicate when you need to act.


1. CARD SENSORS

The machine will in some cases tell which sensor is blocked. Anyhow: clean all when you are at it. See video for instruction on how to clean.

The counters are numbered in the same way as the cards move from the hopper to the slots

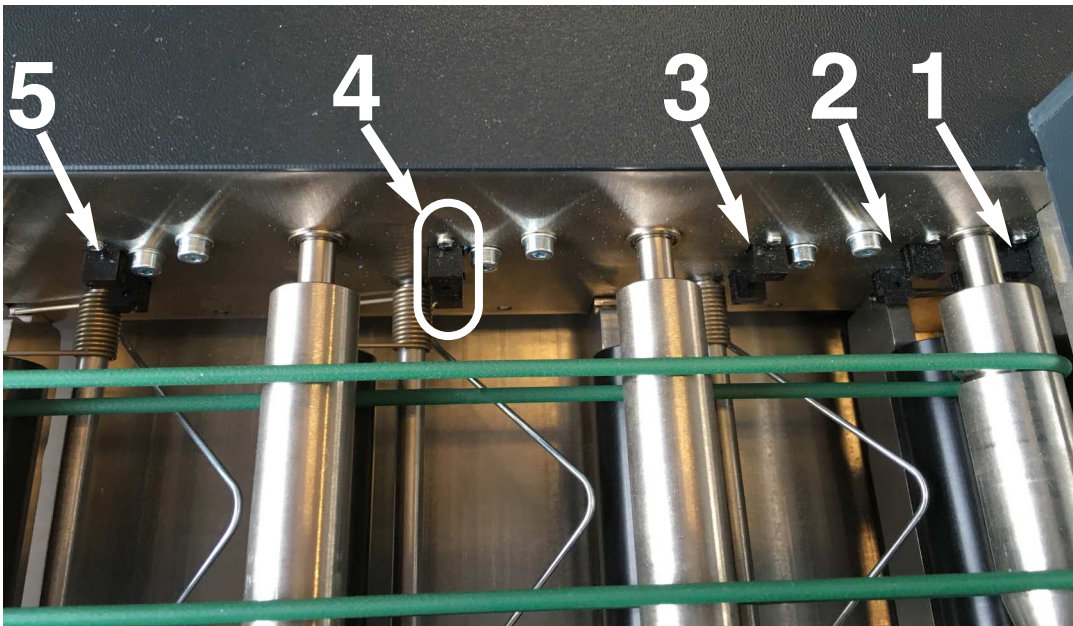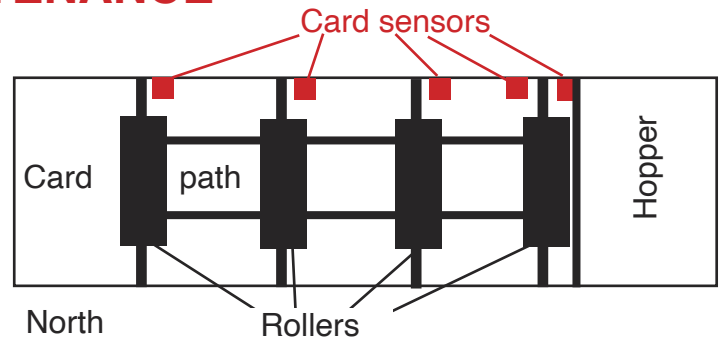

 The 1st sensor is close to the hopper and easily missed if you do not know that it sits there.

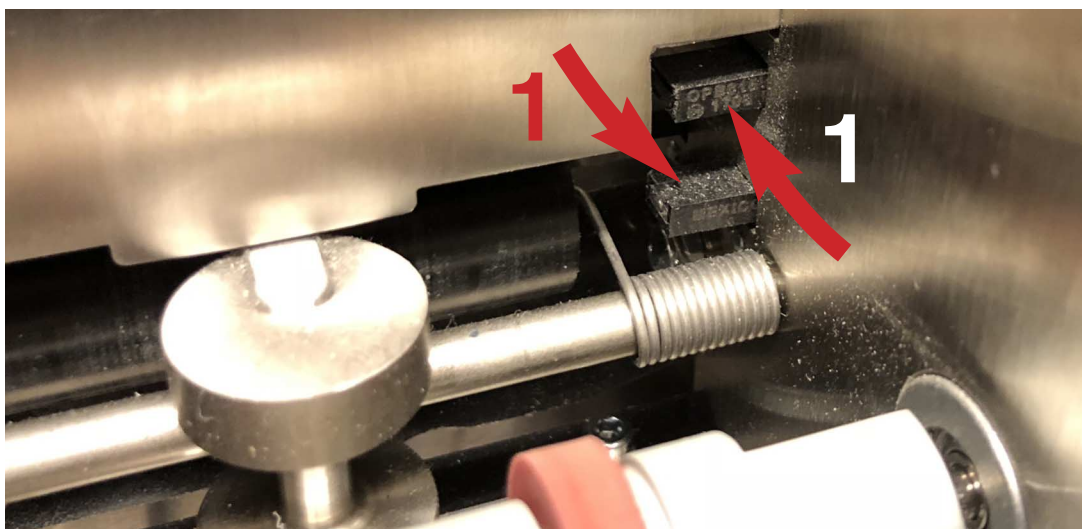

Make sure that you clean all five sensors with real compressed air (not canned) while you are at it. You can also use a small soft brush (e.g. a child's tooth brush). **Note** that it is important to clean the upper part of the sensors. c.f. the video <https://youtu.be/Aha8Q1FrKj0>

OCCASIONAL MAINTENANCE

2. FEED ROLLER

You will need to clean the roller with Isopropyl Alcohol, if it for some reason would pick up grease (or oil).

3. CAMERA

Dust should be blown off the camera (2) if it is totally covered (=when the machine has problems to recognize the cards).

Please do not use any liquids or tools to clean the camera!

