

BridgeSorter Mk IV snelstartgids

1. VOEDING AAN DE BRIDGESORTER

Sluit de stroomadapter aan op het stopcontact en de stroomingang van de machine. De machine klapt met zijn poorten als hij klaar is.

2. INSTALLEER DE APP

U moet Duplimapp installeren om de machine te bedienen. Er zijn verschillende versies:

Download Duplimapp (duplicatie-app)

Er zijn verschillende apps voor verschillende platformen. Klikbare links zijn te vinden op duplimapp.com

Android

Apple

Kindle

Windows



3. NETWERK INSTELLEN (WLAN)

Verbind je apparaat met het BridgeSorter wifi-netwerk. De naam van het netwerk EN het wachtwoord is Duplimate+het nr. van het apparaat (4 GROTE cijfers op de achterkant). bijv. "BridgeSorter1234"

"Vergeet" (schakel "Automatisch verbinden" uit) andere netwerken.

4. START DUPLIMAPP

 
Start de Duplimapp en wacht tot het startscherm wordt weergegeven



5. SELECTEER ONTWERP

Klik op het systeempictogram (3 verticale stippen) en selecteer Ontwerpen. Klik op de ?-knop als je hulp nodig hebt. Illustraties van de ontwerpen zijn hier te vinden:

http://www.jannersten.com/duplimapp/Help/html/designs_en.html

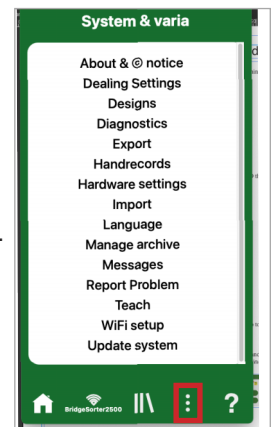

6. HULP!



Klik op de ?-knop om het huidige scherm en zijn functies te krijgen uitgelegd.

7. THUIS



Klik op de Home-knop om een nieuw evenement te starten.

8. MAAK EEN EVENEMENT

Maak een NIEUW evenement aan. Dit leidt naar het scherm Instellingen

9. INSTELLINGEN

We raden u aan eerst de standaardinstellingen te proberen, waarbij u alleen de "Aan" wijzigt parameter, indien nodig.

10. DUPLICEREN

Plaats het eerste bord dat moet worden gedupliceerd en volg de instructies op het scherm.

11. HANDEN AFDRUKKEN



Klik op het systeempictogram (3 verticale stippen) en selecteer *Handen afdrukken*.

12. EXPORT

Selecteer *Exporteren* via het *Systeem* menu (pictogram met drie stippen) om de handen naar een ander apparaat of naar een USB-stick te exporteren. Houd er rekening mee dat de flashdrive in de sleuf aan de achterkant van de machine moet worden geplaatst voor het USB-alternatief.

Recent events		
Name	Created	Last used
Demo	2021-10-08	2021-10-11

All events		
Name	Created	Last used
Demo	2021-10-08	2021-10-11

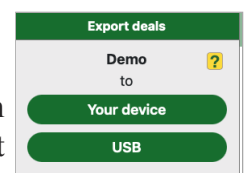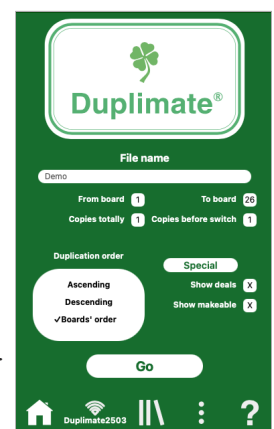  

The boards

Please give a copy of this page to those who are to handle the boards



LABELING

- i. Make sure that you put North in the right direction. (North shall be to the left hand side when you have the hinges towards you.)
- ii. You are advised to put the small number on the edge of each and all boards, as shown on the back of the sheets carrying the stickers. It is worth while to bother about this, because it will make it easier to check that the boards in a pile are complete and stacked in numerical order.



Board number barcode

You must be careful to put the (optional) sticker showing the board number in barcode (digital) form at NORTH'S end. The indent on the stickers must match the indent on the board. (Verify that you got it right by testing the first set before continuing.)

HANDLING THE BOARDS

The recommended procedure is as follows:

- i. Put the sets of boards to be duplicated on the right hand side of the machine.
- ii. Have at least three (preferably more) decks in the hopper when you start.
- iii. Open the first board to be duplicated and put the cards in the hopper.
- iv. Insert the just emptied board.
- v. Open the next board and put the cards in the hopper.
- vi. When the machine stops, remove the just duplicated board, close it, and put it upside down to the left hand side of the machine.
- vii. Insert the emptied board (according to v.)
- viii. Open the next board and put the cards in the hopper, etc.

 
 
DAILY MAINTENANCE

We do not expect you to do the "daily maintenance" described below daily, but when needed. The machine will indicate when you need to act.


1. CARD SENSORS

The machine will in some cases tell which sensor is blocked. Anyhow: clean all when you are at it. See video for instruction on how to clean.

The counters are numbered in the same way as the cards move from the hopper to the slots

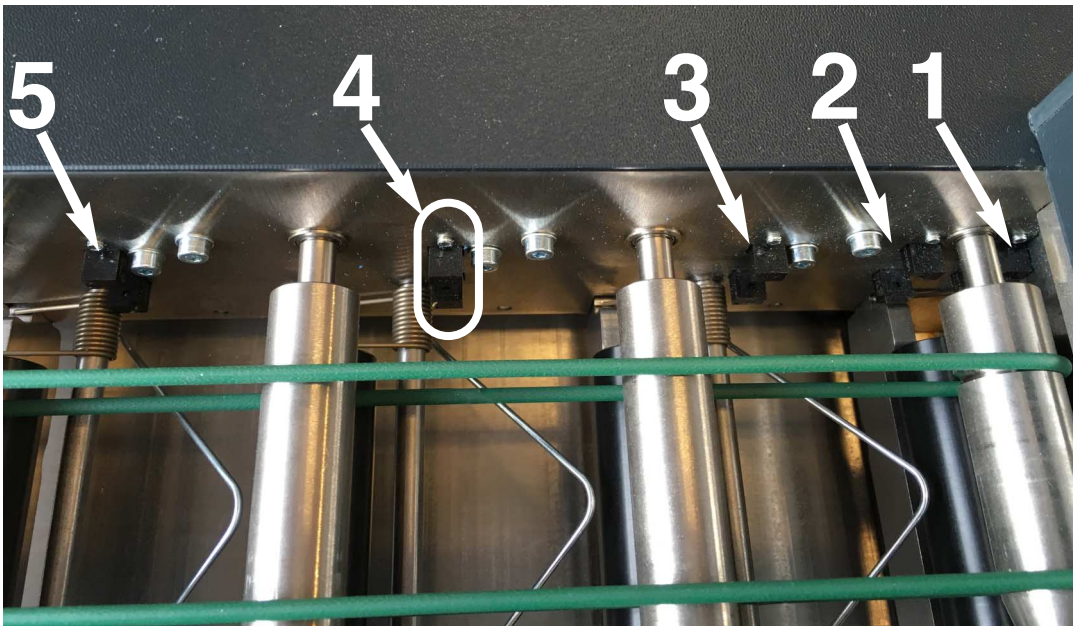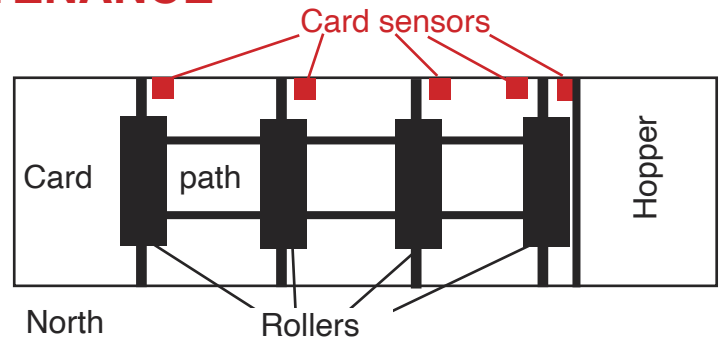

 The 1st sensor is close to the hopper and easily missed if you do not know that it sits there.

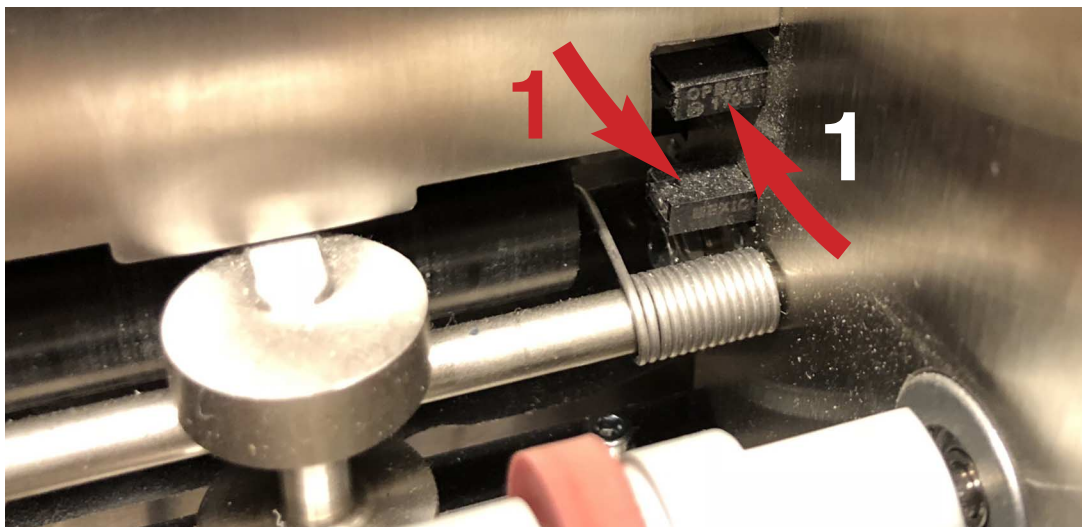

Make sure that you clean all five sensors with real compressed air (not canned) while you are at it. You can also use a small soft brush (e.g. a child's tooth brush). **Note** that it is important to clean the upper part of the sensors. c.f. the video <https://youtu.be/Aha8Q1FrKj0>

OCCASIONAL MAINTENANCE

2. FEED ROLLER

You will need to clean the roller with Isopropyl Alcohol, if it for some reason would pick up grease (or oil).

3. CAMERA

Dust should be blown off the camera (2) if it is totally covered (=when the machine has problems to recognize the cards).

Please do not use any liquids or tools to clean the camera!

