

Board switch

The mechanical switch is pushed inwards (towards the interior of the machine) by the board. Depending on the board (how straight it is at the North pocket), and which hand you use when inserting the board, it can happen that the switch needs to be adjusted.

CHECKING ADJUSTMENT


- Switch off the power to the machine
- Insert a board until you hear a clicking sound
- Check that you can insert the board at least a couple of mm further AFTER the click

Adjusting

First you need to take off the cover with a 2 mm allen key:

<https://www.youtube.com/watch?v=q6pZpsHO4F8>

Locate the board switch (see the illustration below) and untighten the two screws with a 1.5 mm allen key. Then adjust the switch's position.

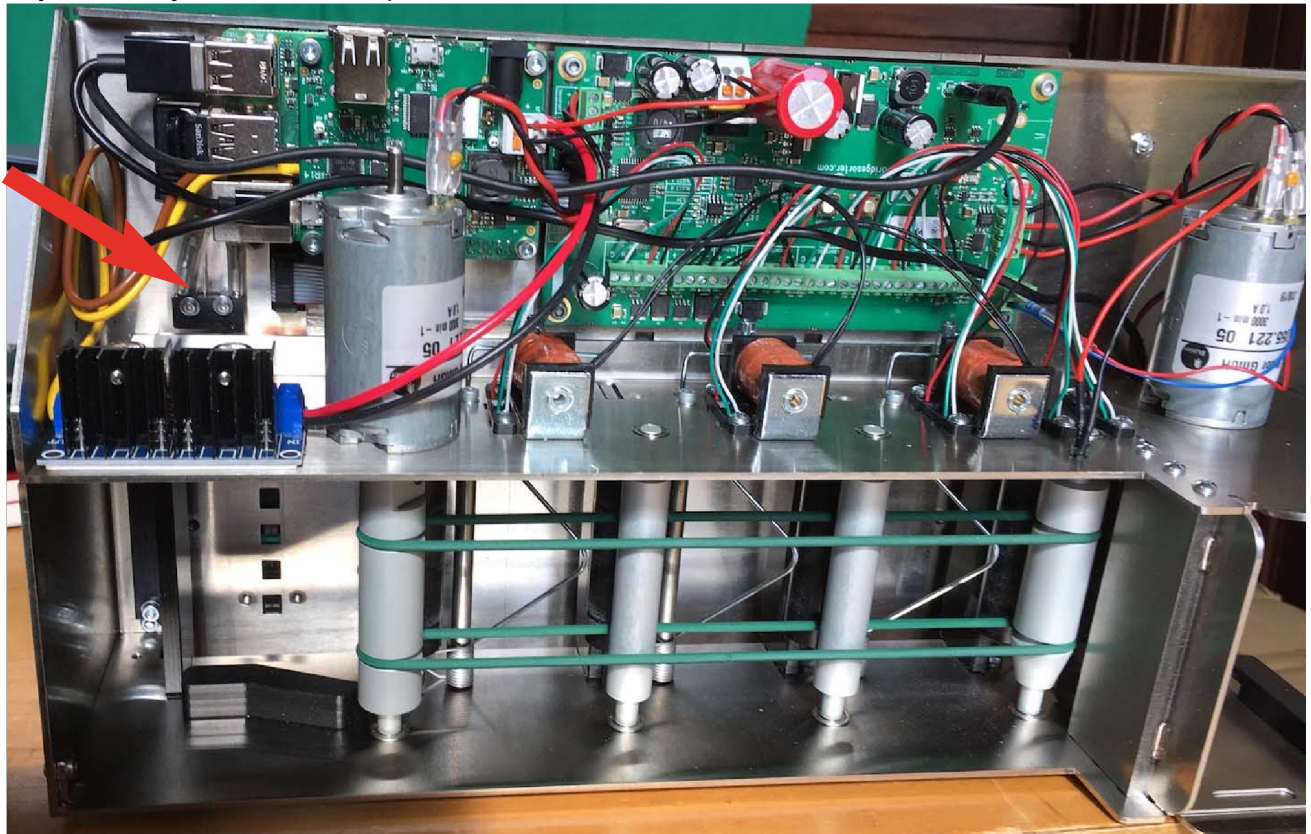

Lock the screws and test that the switch is correctly positioned before tightening the two screws.