

Duplimate Mk 6 start guide

1. ANSLUT TILL STRÖMKÄLLA

Sätt i stickkontakten i väggen och den mindre stickproppen i maskinen. Slå på strömbrytaren så att den gröna lampan tänds. Maskinen talar om när den är redo genom att röra grindarna.

2. INSTALLERA APPEN

Du måste installera *Duplimapp* för att kunna styra maskinen.

Ladda ner Duplimapp (dupliceringsapp)

Det är olika versioner till olika hårdvaror. Klickbara länkar finns på duplimapp.com

Android

Apple

Kindle

Windows



3. STÄLL IN NÄTVERK (WLAN)

Anslut till din Duplimats WiFi network. Både namnet på nätverket OCH lösenord är Duplimate+maskinnr. (4 STORA siffror på baksidan av maskinen, t.ex. "Duplimate2345")

4. STARTA DUPLIMAPP

Starta Duplimapp  och vänta tills du ser dess hemsida:

5. SKAPA NY TÄVLING

Genom att klicka "Nytt" kommer du till en inställningssida:

6. INSTÄLLNINGAR

Vi föreslår att du testar med de inställningar som kommer upp automatiskt, dvs bara ändrar "T.o.m. bricka" (om ni inte ska spela 32 brickor).

7. DUPLICERING

Sätt i den första brickan som ska dupliceras och följ sedan anvisningarna på skärmen.

8. GIVSAMLING

Klicka på systemikonen (3 vertikala punkter) och välj Givsamlings.

9. HEM

 
 
 
 
För att fortsätta duplicera efter att ha skapat en givsamlings går du tillbaka till hemskrämen, dvs klickar på hemikonen. 

10. EXPORTERA

Välj Exportera i systemmenyn (3 vertikala prickar) för att exportera givfiler (inkl. givsamlingsen i skriftarformat) till en USB-sticka eller till den enhet som du använder som fjärrkontroll. OBS att en USB-sticka måste sättas in i en USB-port på baksidan av maskinen om du väljer detta alternativ.

11. HJÄLP!

Klicka på ?-knappen för att få situationen som du är i förklarad för dig.

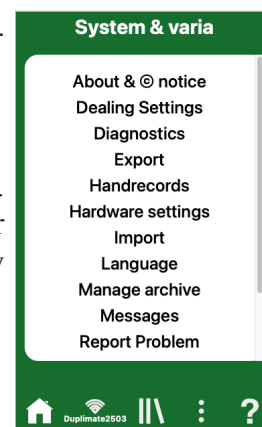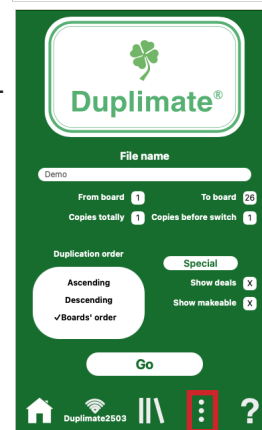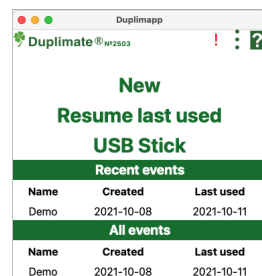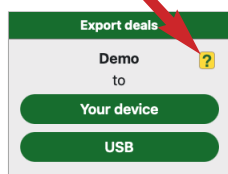

The boards

Please give a copy of this page to those who are to handle the boards



LABELING

- i. Make sure that you put North in the right direction. (North shall be to the left hand side when you have the hinges towards you.)
- ii. You are advised to put the small number on the edge of each and all boards, as shown on the back of the sheets carrying the stickers. It is worth while to bother about this, because it will make it easier to check that the boards in a pile are complete and stacked in numerical order.



Board number barcode

You must be careful to put the (optional) sticker showing the board number in barcode (digital) form at NORTH'S end. The indent on the stickers must match the indent on the board. (Verify that you got it right by testing the first set before continueing.)

HANDLING THE BOARDS

The recommended procedure is as follows:

- i. Put the sets of boards to be duplicated on the right hand side of the machine.
- ii. Have at least three (preferably more) decks in the hopper when you start.
- iii. Open the first board to be duplicated and put the cards in the hopper.
- iv. Insert the just emptied board.
- v. Open the next board and put the cards in the hopper.
- vi. When the machine stops, remove the just duplicated board, close it, and put it upside down to the left hand side of the machine.
- vii. Insert the emptied board (according to v.)
- viii. Open the next board and put the cards in the hopper, etc.

 
 
DAILY MAINTENANCE

We do not expect you to do the "daily maintenance" described below daily, but when needed. The machine will indicate when you need to act.


1. CARD SENSORS

The machine will in some cases tell which sensor is blocked. Anyhow: clean all when you are at it. See [video](#) for instruction on how to clean.

The counters are numbered in the same way as the cards move from the hopper to the slots. i.e. in the cards' direction.

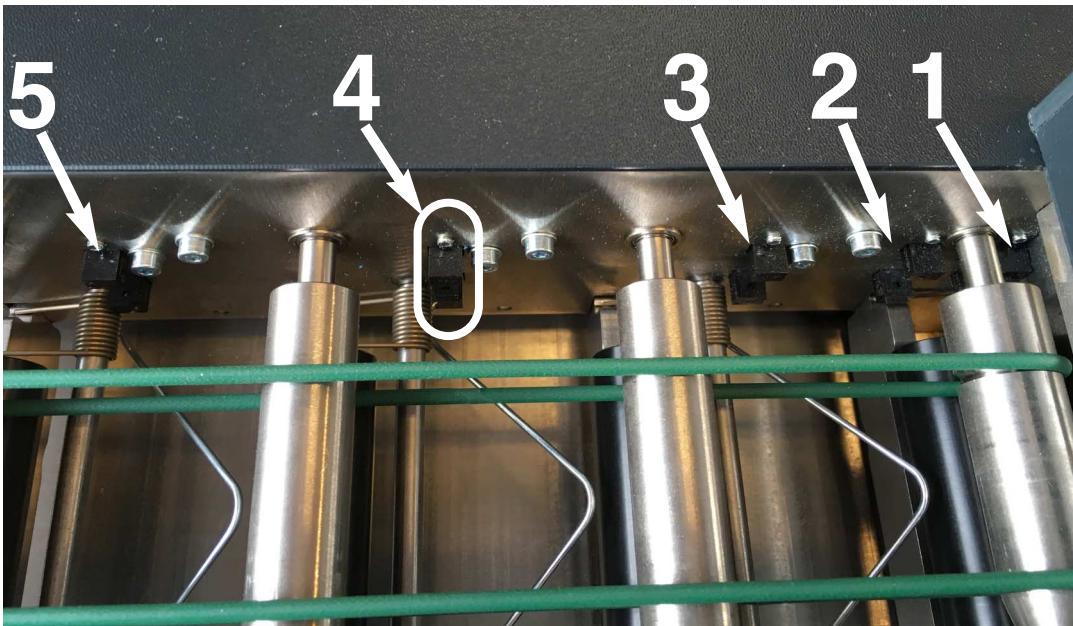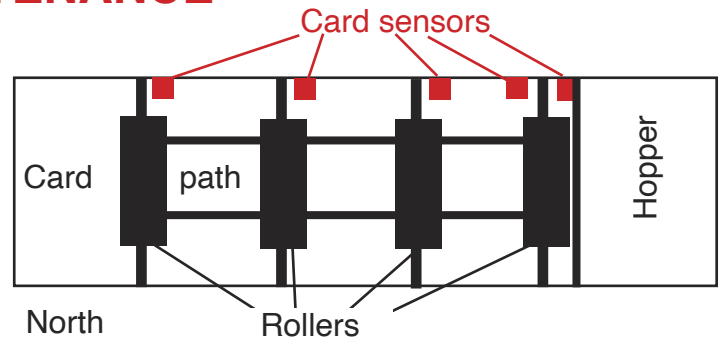

 The 1st sensor is close to the hopper and easily missed if you do not know that it sits there.

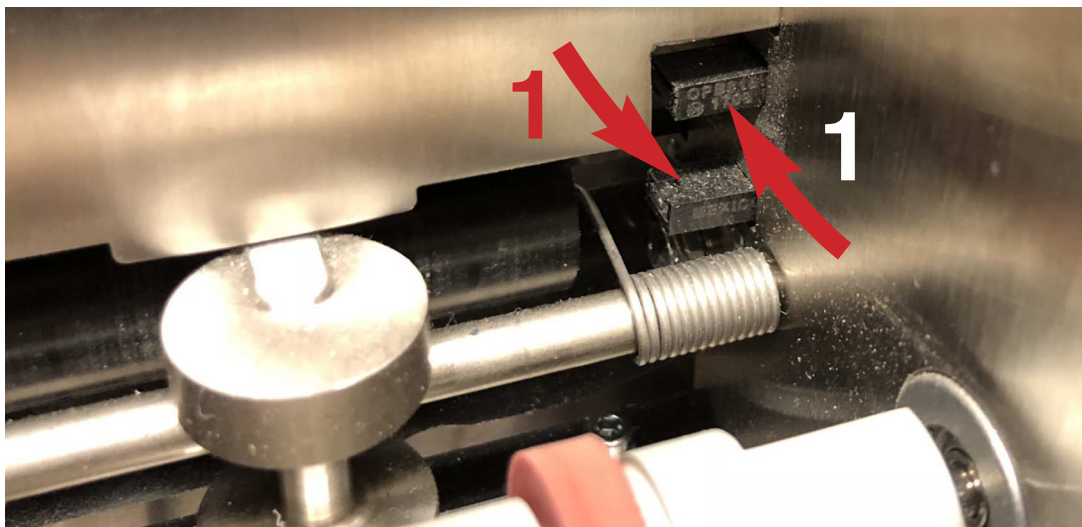

Make sure that you clean all five sensors with real compressed air (not canned) while you are at it. You can also use a small soft brush (e.g. a child's tooth brush). **Note** that it is important to clean the upper part of the sensors. c.f. the video <https://youtu.be/Aha8Q1FrKj0>

OCCASIONAL MAINTENANCE

2. FEED ROLLER

You will need to clean the roller with Isopropyl Alcohol, if it for some reason would pick up grease (or oil).

3. CAMERA

Dust should be blown off the camera (2) if it is totally covered (=when the machine has problems to recognize the cards).

Please do not use any liquids or tools to clean the camera!

NOTE that canned compressed air can damage the lens. It is better to clean (gently) with a cotton bud if blowing with your mouth does not suffice.

