

# BridgeSorter Mk IV Schnellstartanleitung

## 1. BRIDGESORTER EINSCHALTEN

Verbinden Sie das Netzteil mit der Steckdose und dem Stromeingang der Maschine. Die Maschine schlägt mit den Toren, wenn sie bereit ist.

## 2. INSTALLIEREN SIE DIE APP

Sie müssen Duplimapp installieren, um die Maschine zu steuern. Es gibt verschiedene Versionen:

Android



Apple



Kindle



Windows



(Anklickbare Links finden Sie auch unter [duplimapp.com](http://duplimapp.com))

## 3. NETZWERK (WLAN) EINSTELLEN

Verbinden Sie Ihr Gerät mit dem BridgeSorter WiFi-Netzwerk. Der Name des Netzwerks UND das Passwort ist BridgeSorter+die Nr. der Einheit (4 GROSSE Ziffern auf der Rückseite). z.B. „BridgeSorter1234“

„Vergessen“ (d. h. deaktivieren Sie „Automatisch verbinden/beitreten“) das Netzwerk, das Sie verwenden, um sich mit dem Internet zu verbinden.



## 4. DUPLIMAPP STARTEN

Starten Sie die Duplimapp und warten Sie, bis der Startbildschirm angezeigt wird.

## 5. DESIGN AUSWÄHLEN

Klicken Sie auf das Systemsymbol (3 vertikale Punkte) und wählen Sie *Designs*. Klicken Sie auf die ?-Schaltfläche, wenn Sie Hilfe benötigen. Abbildungen der Standard Designs finden Sie hier: [https://duplimapp.com/Help/html/select\\_design.html](https://duplimapp.com/Help/html/select_design.html)

## 6. HILFE!

Klicken Sie auf die ?-Schaltfläche, um den aktuellen Bildschirm und seine Funktionen erklärt zu bekommen.



## 7. ZUHAUSE

Klicken Sie auf die Home-Schaltfläche, um ein neues Turnier zu starten.



## 8. ERSTELLE EIN NEUES TURNIER

Klicken Sie auf NEUES Turnier. Dies führt zum Einstellungsbildschirm



## 9. EINSTELLUNGEN

Wir empfehlen, dass Sie es zuerst mit den Standardeinstellungen versuchen, Ändern Sie nur den „To“-Parameter, falls erforderlich.

## 10. DUPLIZIEREN

Legen Sie die erste zu duplizierende Karten ein und folgen Sie den Anweisungen auf dem Bildschirm.

## 11. HANDAUFZEICHNUNGEN

Klicken Sie auf das Systemsymbol (3 vertikale Punkte) und wählen Sie Verteilungen aus.

## 12. AUSFUHR

Wählen Sie Export über das Systemmenü (3-Punkte-Symbol), wenn Sie die Verteilungen (einschließlich Handaufzeichnungen) auf ein anderes Gerät, oder auf ein USB-Flash-Laufwerk, exportieren müssen. Beachten Sie, dass das Flash-Laufwerk in den Steckplatz auf der Rückseite des Geräts eingesteckt werden muss, um die „USB“-Alternative zu verwenden.



# The boards

Please give a copy of this page to those who are to handle the boards



## LABELING

- i. Make sure that you put North in the right direction. (North shall be to the left hand side when you have the hinges towards you.)
- ii. You are advised to put the small number on the edge of each and all boards, as shown on the back of the sheets carrying the stickers. It is worthwhile to bother about this, because it will make it easier to check that the boards in a pile are complete and stacked in numerical order.

## BACKSIDE

You are advised to put on the backside stickers as that eliminates the risk of having the wrong deal in the boards. We suggest that you use Pro mode if you are an experienced duplicator.



You must be careful to put the barcode sticker showing the board number at NORTH end. The indent on the stickers must match the indent on the board. (Verify that you got it right by testing the first set before continuing.)

## HANDLING THE BOARDS

The recommended procedure is as follows:

- i. Put the sets of boards to be duplicated on the right hand side of the machine.
- ii. Have at least three (preferably more) decks in the hopper when you start.
- iii. Open the first board to be duplicated and put the cards in the hopper.
- iv. Insert the just emptied board.
- v. Open the next board and put the cards in the hopper.
- vi. When the machine stops, remove the just duplicated board, close it, and put it upside down to the left hand side of the machine.
- vii. Insert the emptied board (according to v.)
- viii. Open the next board and put the cards in the hopper, etc.



## DAILY MAINTENANCE

We do not expect you to do the "daily maintenance" described below daily, but when needed. The machine will indicate when you need to act.


### 1. CARD SENSORS

The machine will in some cases tell which sensor is blocked. Anyhow: clean all when you are at it. See video for instruction on how to clean.

The counters are numbered in the same way as the cards move from the hopper to the slots

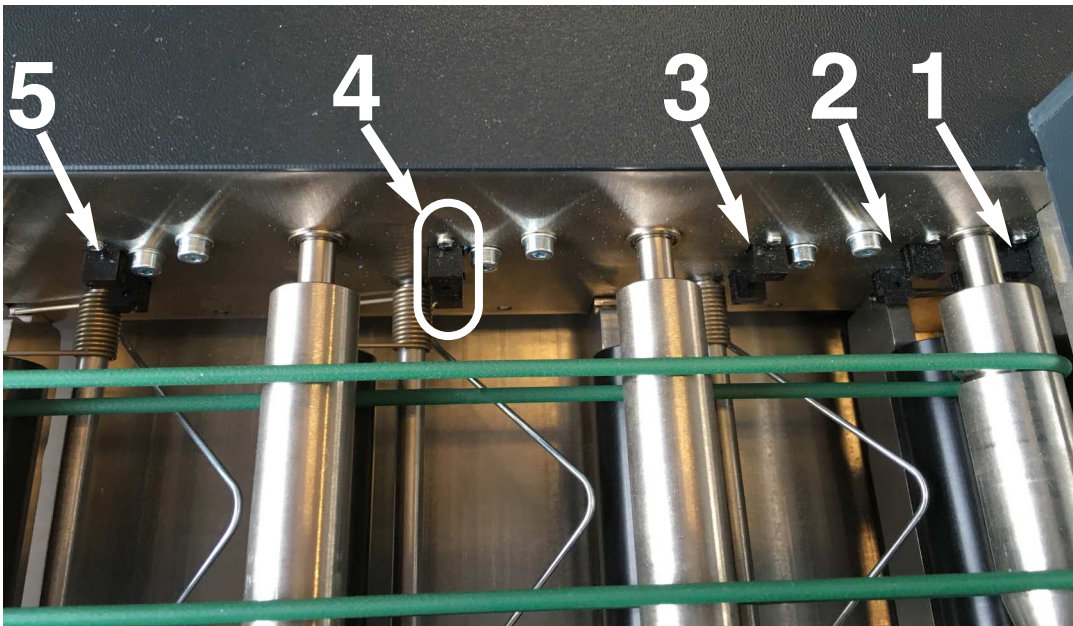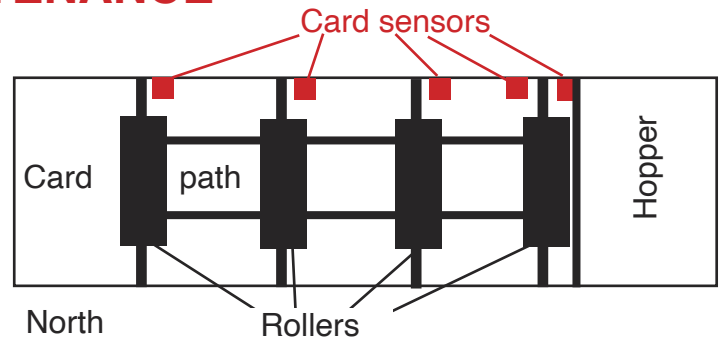

The 1st sensor is close to the hopper and easily missed if you do not know that it sits there.

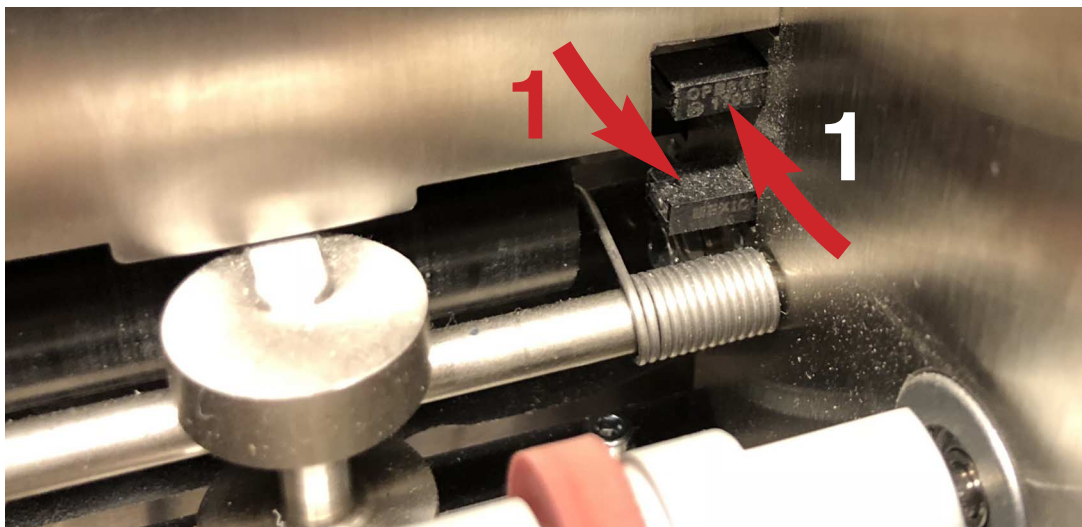

Make sure that you clean all five sensors with real compressed air (not canned) while you are at it. You can also use a small soft brush (e.g. a child's tooth brush). **Note** that it is important to clean the upper part of the sensors. c.f. the video <https://youtu.be/Aha8Q1FrKj0>



# OCCASIONAL MAINTENANCE

## 2. FEED ROLLER

You will need to clean the roller with Isopropyl Alcohol, if it for some reason would pick up grease (or oil).

## 3. CAMERA

Dust should be blown off the camera (2) if it is totally covered (=when the machine has problems to recognize the cards).

**Please do not use any liquids or tools to clean the camera!**

